




## Rubber Mounted SUB Adapter Installation Instructions For: OEM KTM Rubber Mtd. Triple Clamp

**Note: All work should be done by a qualified professional mechanic.**

1. Install Frame Bracket by following Scotts Tower Installation Instructions.
2. Once Frame Bracket has been installed, reinstall top triple clamp and torque new supplied stem bolt, stem and fork pinch bolts to manufacturers torque specs.
3. Remove stock bar perches.
4. Install BRP SUB Adapter Plate using M12 x 60 Hex Head Bolts. Install M12 x 60 Bolts down from the top & replace stock rubber cones with supplied Aluminum Cones in triple clamp. Install M12 Thin Washer and M12 Nut and torque to 35 - 40 Ft./Lbs.
5. Assemble BRP Handlebar Perches as shown in illustration and attach to SUB Adapter Plate using M8 x 45 Hex Head bolts and washers. Use Blue Loc-Tite and torque to 18-20 Ft./Lbs.
6. Install Scotts Steering Stabilizer with supplied M6 x 20 Allen bolts using Blue Loc-Tite.
7. Re-install handle bars and install Top Bar Clamps using M8 x 35 Socket Head Allen bolts. Apply a small amount of grease to threads and torque to 24-26 Ft./Lbs.
8. Check function of all controls while bike is on the stand to ensure there is no cable binding.
9. Re-torque all bolts after initial ride to ensure proper torque specifications.
10. Routine inspection of all components should be performed to ensure proper function of all controls.

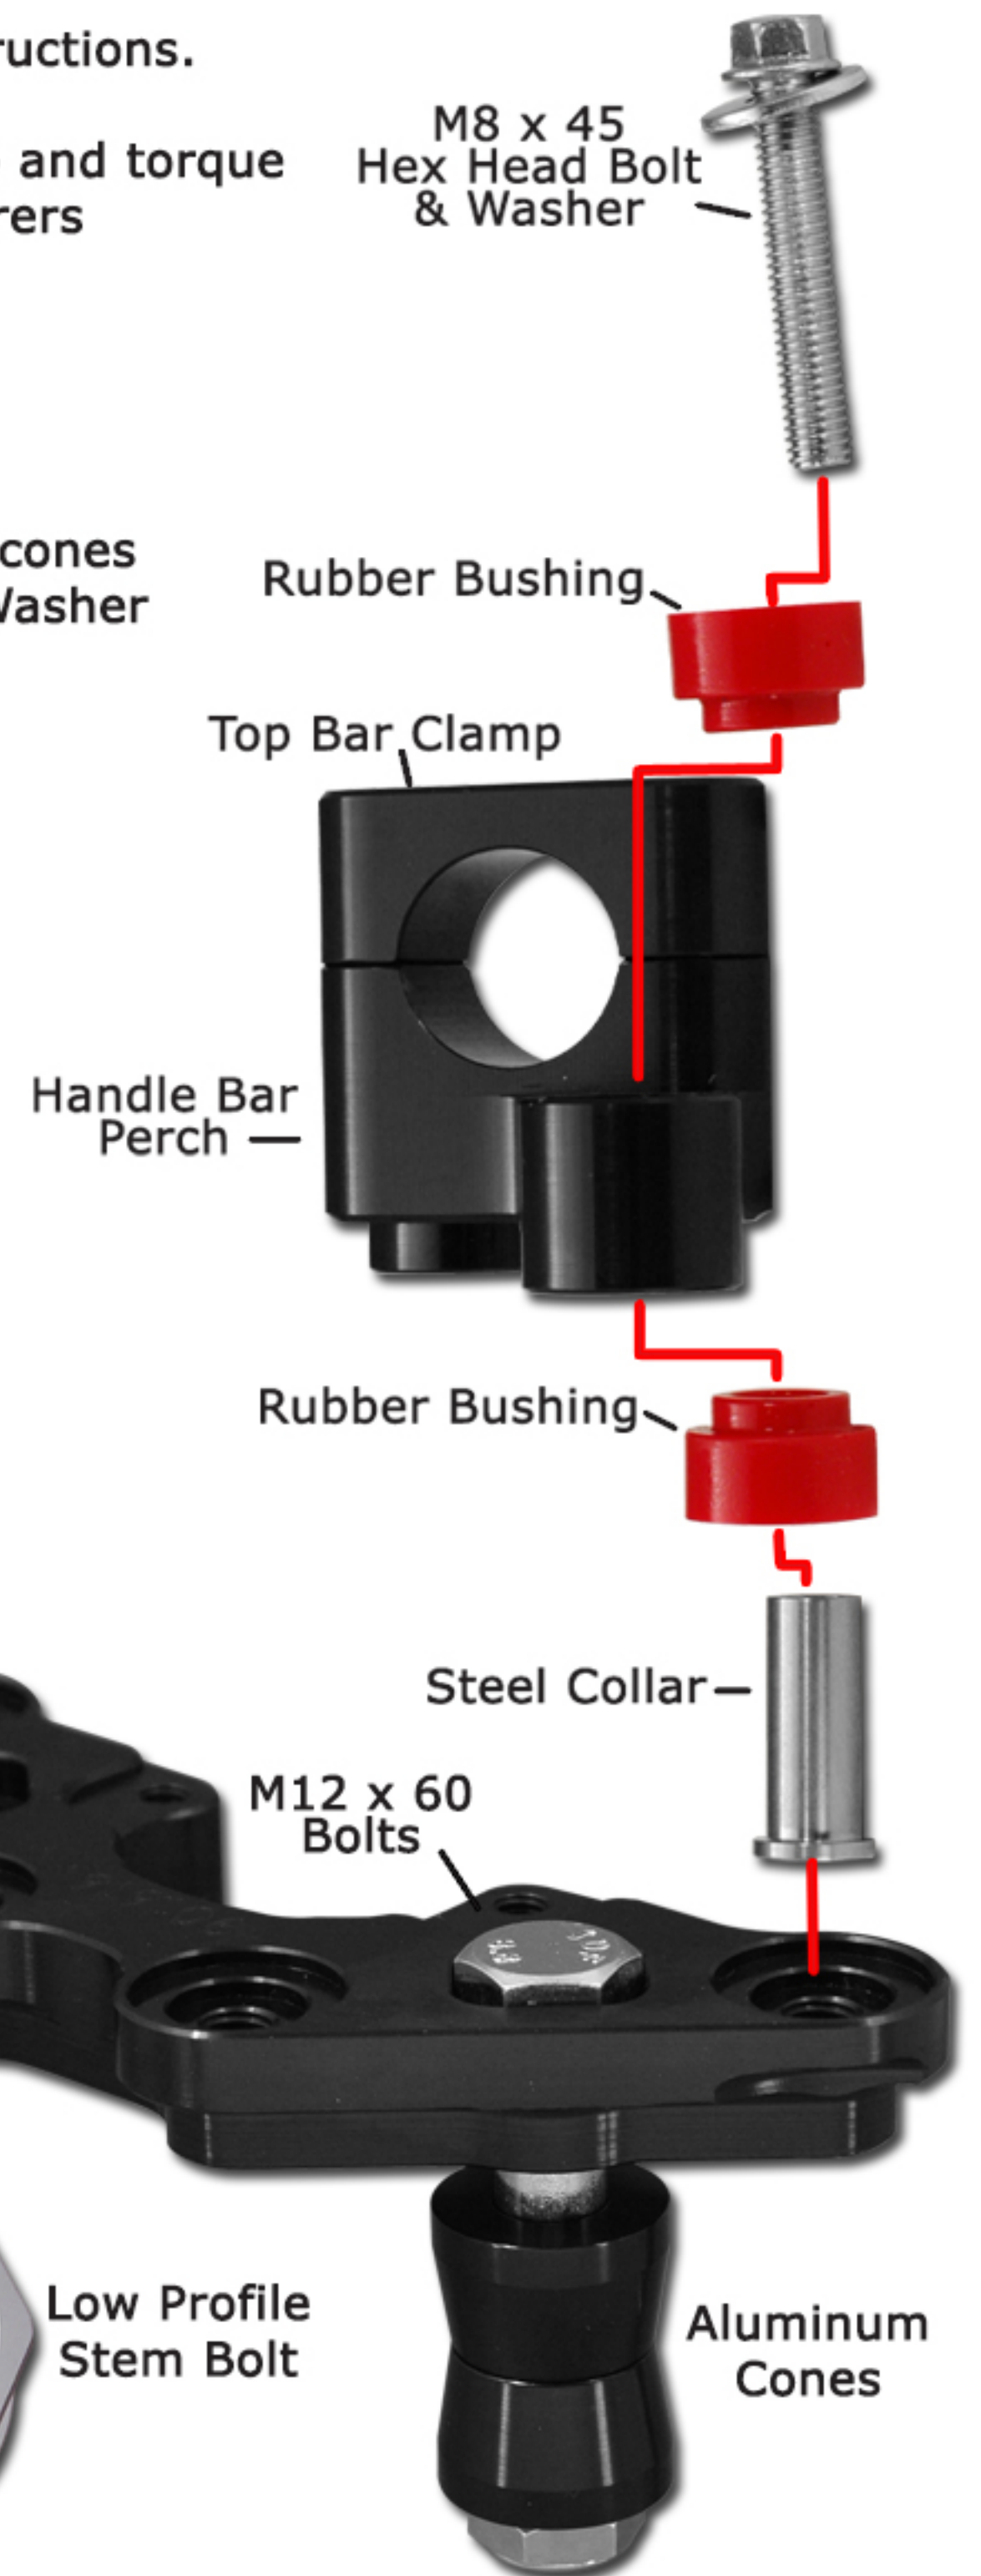

Kit Includes (2)  
Sets of Bushings

(Red) Medium Soft Bushings



(Blue) Soft Bushings



For Technical Support Contact BRP. Toll Free: 800-834-9363 Or 719-633-8133