






## Scotts Steering Stabilizer Hand Guard Mount

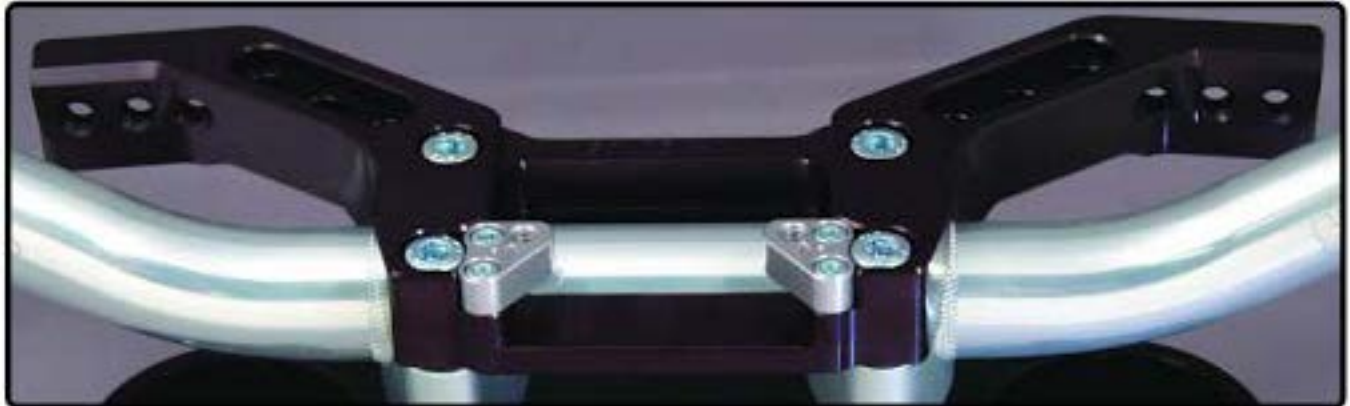

**USE Loctite or Thread Locking Agent on M4 x 10 Bolts**

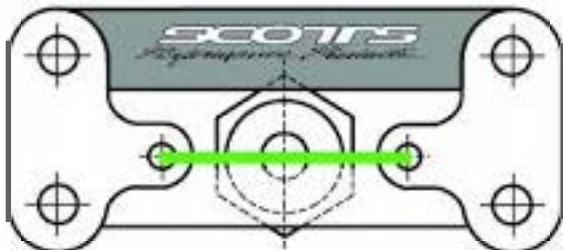

**Correct Alignment**

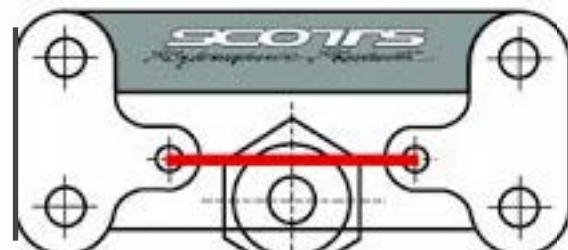

**Incorrect Alignment**

**M6 Threaded Mounting Holes Must Be Centered Over Steering Stem**

**READ APPLICATIONS GUIDE TO DETERMINE CORRECT  
NUMBER TAB FOR YOUR MODEL AND HANDLEBAR POSITION**

P: 818 248-6747 - [www.scottsonline.com](http://www.scottsonline.com)

- 1) Install the Handguard Barclamp with the 4 bolts tightened evenly
- 2) Find your model on the application page (for example: 2017 450 SXF)
- 3) Decide which position you want to run your bars in (example: position 2 is 39)
- 4) Find the tabs that match that position (they would be marked 39 in this case)
- 5) Install the tabs as per the pictures, readable from the riders view, using Loc-tite
- 6) Note the "correct alignment" pictures to insure it is correctly aligned

<b>BCL-90 40 32-39 HANDGUARD TAB INSTRUCTIONS</b>			
<b>Year</b>	<b>Husqvarna Austrian Models</b>	<b>Pos. 1</b>	<b>Pos. 2</b>
16 - 17	FC 250/350/450 4 Stroke Models	32	39
16 - 17	TC/TX 125/250 2 Stroke Models	32	39
<b>W/ OEM BILLET RUBBER MOUNTED TRIPLE CLAMP # 790.01.034.022</b>			
<b>Year</b>	<b>KTM Models</b>	<b>Pos. 1</b>	<b>Pos. 2</b>
15 - 17	250/450 SXF FACTORY EDITION	32	39
16 - 17	125/150/250/300/350/450 SX/SXF/XC/XCF	32	39
<b>W/ OEM BILLET RUBBER MOUNTED TRIPLE CLAMP # 790.01.034.022</b>			
<b>NOTE: This Bar Clamp Will Only Work With (1-1/8") Over Sized Handle Bars Position 1 is closest to the rider - Position 4 is furthest from the rider.</b>			

